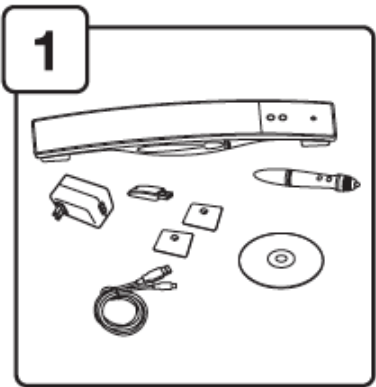

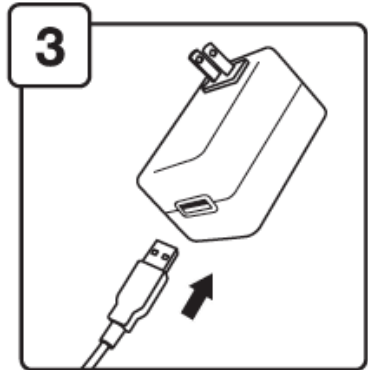
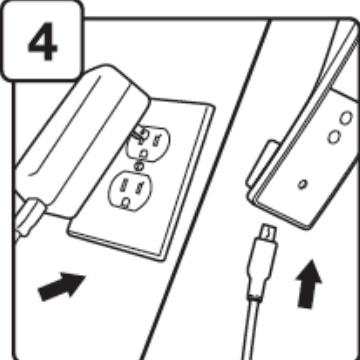

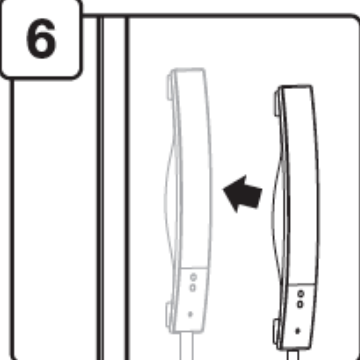
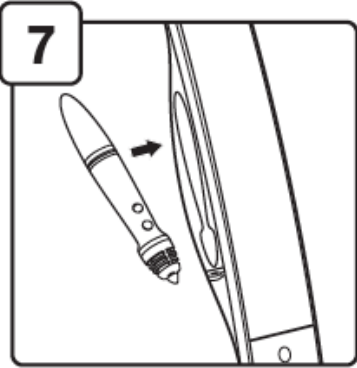
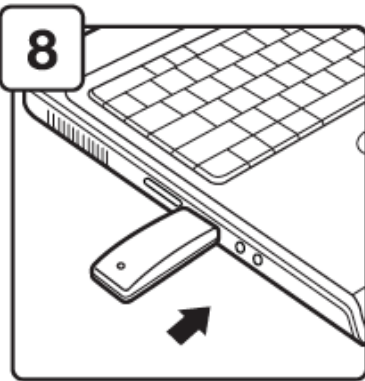
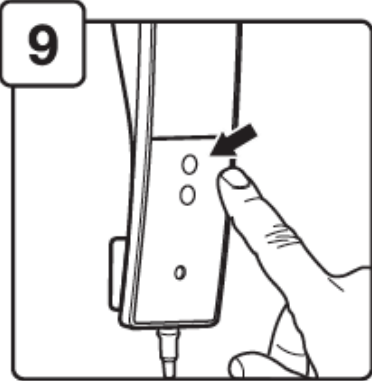
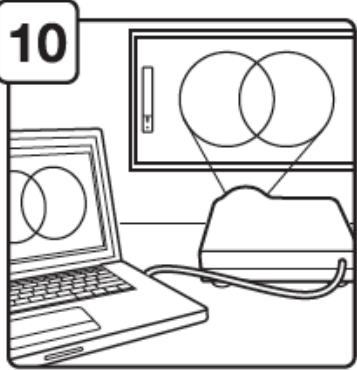



MimioTeach Hardware Set Up Guide

<p>Step 1: Remove contents from box.</p>	<p>Step 2: Install software from Self Service not from disk that came in box. It is called "Mimio Studio 9.12 updated package" and you can find it in the featured section or the interactive whiteboard section.</p> <p>Once installed, the software can be found in the "Mimio" folder in your applications folder.</p>	<p>Step 3: Connect the USB cable to the USB power supply.</p>
 <p>1</p> <p>Illustration showing the contents of the MimioTeach box: a stylus, a USB power supply, a USB cable, a CD-ROM, a small tag, and a pen.</p>	 <p>Illustration of the Mimio Studio software icon, which is a stylized 'M' composed of colorful geometric shapes.</p>	 <p>3</p> <p>Illustration showing a USB cable being plugged into the USB power supply.</p>
<p>Step 4: Connect the other end of the USB cable to the bottom of the MimioTeach bar. Plug the power supply to the electrical outlet.</p>	<p>Step 5: Unscrew the top of the Stylus and remove the tag that protects the battery during shipping.</p>	<p>Step 6: Attach the MimioTeach to the left side of the whiteboard.</p>
 <p>4</p> <p>Illustration showing the USB power supply being plugged into an electrical outlet and the USB cable being plugged into the bottom of the MimioTeach bar.</p>	 <p>5</p> <p>Illustration showing the top of the stylus being unscrewed and removed, revealing the battery compartment.</p>	 <p>6</p> <p>Illustration showing the MimioTeach bar being attached to the left side of a whiteboard.</p>

MimioTeach Hardware Set Up Guide

<p>Step 7: Place the stylus in its docking station on the MimioTeach bar for charging.</p>	<p>Step 8: Connect the Hub receiver into a USB port on your computer.</p> <p>Also launch the Notebook software from the Mimio folder within the Applications folder.</p>	<p>Step 9: Press the “Calibrate” button on the MimioTeach bar.</p>
		
<p>Step 10: Make sure to turn on projector to calibrate MimioTeach bar. Follow the onscreen directions to calibrate.</p>	<p>Status Lights: The status light on the MimioTeach bar will tell you the status of the connection between the bar, power source and computer/software.</p>	<p>Note: The status light is also the power button.</p>
		<p>Status Light</p> <p>Off: Not receiving power; USB/power cable is not connected, or MimioTeach is turned off.</p> <p>Solid Green: MimioTeach is connected and receiving power; MimioStudio™ software is running.</p> <p>Flashing Green: MimioTeach is connected and receiving power; MimioStudio software is not running.</p> <p>Solid Amber: MimioTeach is connected and receiving power; MimioTeach is searching for connection to the MimioHub™ receiver.</p>